B Instrumer

A/161-1 High Shock IEPE Accelerometer – 10,000g



0.5 mV/g ±10%

10gm

121°C Max

Developed for demanding applications requiring the measurement of high amplitude, short duration transient events such as pyrotechnic shock or high energy impacts, the A/16X range of stainless steel IEPE accelerometers have a range from 10,000g up to 50,000g.

The design of our more standard accelerometers have limitations when used for shock applications, these can either be due to the short duration of the transient event or due to the high level of the shock amplitude, either of these elements can cause issues for the standard sensor and electronics used in the IEPE accelerometers. To overcome these issues the A/16X range has integrated filters which ensure the response is linear across a wide frequency band (1Hz to 15kHz) and up to a peak amplitude measurement of 50,000g. The A/16X range is also designed to withstand over testing, the accelerometers have a physical built in protection up to 60,000g, (depending on version) this is necessary due to the highly variable and sometimes unpredictable nature of pyrotechnic events.


Options:

A/161 – M5 Microdot connector A/161-1 - Integral Cable A/162 - M5 Microdot connector A/162-1 - Integral cable A/163-1 - Integral cable

		A/161-1	
	Sensitivity ±10%	0.5mV/g	0.05mV/(m/s²)
	Range ±	10000g	98100m/s ²
	Resolution	0.3grms	
	Typical Frequency Response ±5% ±10%	1Hz - 15kHz 0.7Hz – 16kHz	
	Resonant Frequency	≥40 kHz	
	Horizontal Sensitivity	≤7%	
	Physical Shock Limit	50000g	49000m/s ²
	Temperature Range	-40 to +121°C	-40 to +482°F
	Excitation Voltage	+18 to +28 V DC 2 - 20 mA <150 Ω +8 to +12 V DC No Ceramic Shear	
	Excitation Current		
	Output Impedance		
	Output Bias Voltage		
	Isolation Installation		
	Sensing element		
	Dimensions	Ø13.2mm × 26mm	Ø0.52"×1.02"
	Weight	10grams	0.35oz
	Installation	Installation M5	
	Connection	Integral cable	
Case material Stainless Stee		Steel	

Other applications requiring high transient acceleration measurements can include:

- Pile Driver Monitoring
- Simulated Pyroshock Event
- Recoil & Penetration
- Impact Press Monitoring
- Explosive Studies
- Armour Piercing

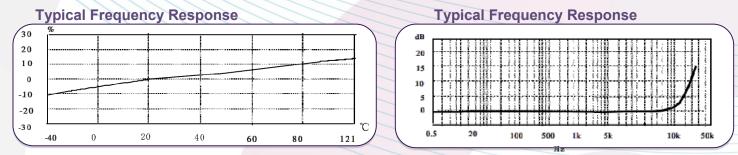

Please note: For information and reference only. Data should not be used as pass / fail criteria for calibration purposes

DJB Instruments (UK) Ltd Finchley Avenue, Mildenhall, Suffolk IP28 7BG

+44 (0)1638 712 288 sales@djbinstruments.com Email www.dibinstruments.com

DJB lss.3.2020



A UK company with UK-based manufacturing, assembly and calibration in-house.

Tel

Web

ISO 9001 - 00025363