

AM/30HR.66C Monoaxial MEMS High Resolution DC Response Accelerometer ±30g range, 66.7mV/g sensitivity


The AM range of accelerometers are MEMS (micro electro mechanical system) DC response voltage output devices for testing at low frequency vibration measurement from DC (0Hz) and above.

The AM/30HR.66C has a ¹/₄-28UNF 4 pin connector and cables to suit your application can be supplied as an option.

Ideally suited to low frequency vibration applications including low level vibration where high sensitivity is required. Due to their ability to measure DC response they can also be used to measure constant gravity application.

The AM/30HR.66C has a range of \pm 30g and a sensitivity of 66.7mV/g, we recommend using with DJB's MEMS signal conditioner the DCM-03

AM/30HR.66C

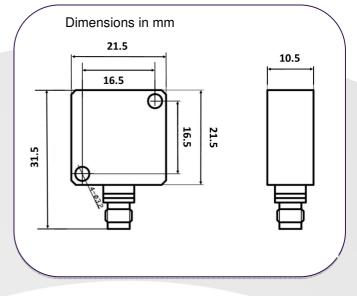


Features:

- Operational frequency range DC to 1600Hz
- 1/4-28 UNF 4 pin connector
- DJB signal conditioner model DCM-03 available as an option
- Differential Capacitance operation
- Compact form and low mass
- Constant gravity measurement

Applications:

- Auto/Aero structural body surveys
- Constant gravity measurements
- General vibration measurement
- Seismic vibration measurement
- Crash testing

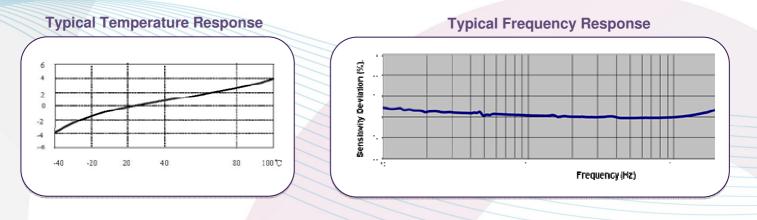

Please note: For information and reference only. Data should not be used as pass / fail criteria for calibration purposes.

DJB Instruments (UK) Ltd Finchley Avenue, Mildenhall, Suffolk IP28 7BG Tel+44 (0)1638 712 288Emailsales@djbinstruments.comWebwww.djbinstruments.com

DJB Iss.4.2021



A UK company with UK-based manufacturing, assembly and calibration in-house.

ISO 9001 - 00025363



AM/30HR.66C Monoaxial MEMS High Resolution DC Response Accelerometer ±30g range, 66mV/g sensitivity



	Metric	Imperial
Sensitivity (20°C)	6.8mV/(m/s ²) ±10%	66.7mV/g±10%
Measurement Range	±294m/s² pk	±30g pk
Transverse sensitivitv	≤5%	
Frequency Range (±5%)	DC to 1500 Hz	
Frequency Range (±10%)	DC to 1600Hz	
Mounted Resonance Frequency	5,000 Hz	
Temperature Range	-40 to +120°C	-40 to +248°F
Temperature Sensitivity	0.1 mV/°C	
Shock limit (No Supply)	29,420m/s ²	±3,000g
Power Supply	+6 to +30 VDC	
Operating Current	≤5mA	
Offset Voltage	2.5±0.1VDC	
Noise(100Hz)	< 0.14mVrms	
Resolution	5.5mg (rms)	
Weight	12grams	0.42oz
Case material	Titanium	
Case sealing	Hermetic	
Mounting	2 x Ø3mm holes	2 x Ø0.12inch holes
Connector Exit	Side	
Size	21.5 x 21.5 x 10.5mm	0.84 x 0.84 x 0.41 inches
IP rating	IP65	

Options:

- DCM-03 3 channel MEMS signal conditioning unit.
- Pigtail cable terminations

Please note: For information and reference only. Data should not be used as pass / fail criteria for calibration purposes.

DJB Instruments (UK) Ltd Finchley Avenue, Mildenhall, Suffolk IP28 7BG

+44 (0)1638 712 288 Email sales@djbinstruments.com Web www.djbinstruments.com



A UK company with UK-based manufacturing, assembly and calibration in-house.

Tel

DJB Iss.4.2021