

# AMB/100.20 Biaxial MEMS DC Response Accelerometer

±100g range, 20mV/g sensitivity



The AMB range of accelerometers are Biaxial MEMS (micro electro mechanical system) DC response voltage output devices for testing at low frequency vibration measurement from DC (0Hz) and above. They are Biaxial (measuring in 2 directions simultaneously) variable capacitance design and are available with a 2m integral cable fitted with a 7pin connector to suit the DJB DCM-03 MEMS signal conditioning unit or alternatively as bare wires.

Ideally suited to low frequency vibration applications including low level vibration where high sensitivity is required.

Due to their ability to measure DC response they can also be used to measure constant gravity application.

The AMB/100.20 has a range of ±100g and a sensitivity of 20mV/g, we recommend using with DJB's MEMS signal conditioner the DCM-03

# Dimensions in mm 24mm 2 Holes Ø 3.mm 15mm 18mm


### Features:

- Operational frequency range DC to 1100Hz
- Integral cable with 7 pin connector or pigtails.
- DJB signal conditioner model DCM-03 available as an option
- Differential Capacitance operation
- Compact form and low mass
- Constant gravity measurement


### Applications:

- Auto/Aero structural body surveys
- Constant gravity measurements
- General vibration measurement
- Seismic vibration measurement
- Crash testing

### **Typical Temperature Response**

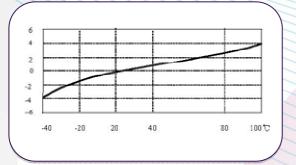

### **Typical Frequency Response**

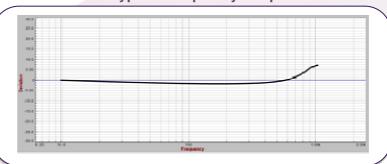

Please note: For information and reference only. Data should not be used as pass / fail criteria for calibration purposes.

**DJB** Instruments (UK) Ltd

Finchley Avenue,

Mildenhall, Suffolk IP28 7BG

Tel Email Web +44 (0)1638 712 288 sales@djbinstruments.com www.djbinstruments.com

LEG 9001

MANACEMEN SYSTEMS 001

DJB Iss.4.2021



## AMB/100.20 Biaxial MEMS DC Response Accelerometer ±100g range, 20mV/g sensitivity



	Metric	Imperial
Sensitivity (20°C)	2mV/(m/s <sup>2</sup> )±10%	20mV/g±10%
Measurement Range	±980m/s² pk	±100g pk
Transverse sensitivity	≤5%	
Frequency Range (±5%)	DC to 1000 Hz	
Frequency Range (±10%)	DC to 1100Hz	
Mounted Resonance Frequency	5,000 Hz	
Temperature Range	-40 to +120°C	-40 to +248°F
Temperature Sensitivity	0.1 mV/°C	
Shock limit (No Supply)	29,420m/s <sup>2</sup>	±3,000g
Power Supply	+6 to +30 VDC	
Operating Current	≤5mA	
Offset Voltage	2.5±0.1VDC	
Noise(100Hz)	< 0.14mVrms	
Resolution	90mg (rms)	
Weight (no cable)	18grams	0.63oz
Case material	Titanium	
Case sealing	Hermetic	
Mounting	2 x Ø3.2mm hole	2 x Ø0.12inch holes
Integral Output Cable	2m	6.5ft
Cable Exit	Side	
Cable connector	7 pin connector (optional pigtails)	
Size	24 x 24 x 15mm	0.94x 0.94 x 0.59 inches
IP rating	IP65	

### **Options:**

- DCM-03 3 channel MEMS signal conditioning
- Pigtail cable terminations

Please note: For information and reference only. Data should not be used as pass / fail criteria for calibration purposes.

**DJB** Instruments (UK) Ltd Finchley Avenue,

Mildenhall, Suffolk IP28 7BG

Tel Web

+44 (0)1638 712 288 Email sales@djbinstruments.com www.djbinstruments.com



