

AMT/2HR.1000 Triaxial MEMS High Resolution DC Response Accelerometer ±2g range, 1000mV/g sensitivity



The AMT range of accelerometers are Triaxial MEMS (micro electro mechanical system) DC response voltage output devices for testing at low frequency vibration measurement from DC (0Hz) and above. They are Triaxial (measuring in 3 directions simultaneously) variable capacitance design and are available with a 2m integral cable fitted with a 7pin connector to suit the DJB DCM-03 MEMS signal conditioning unit or alternatively as bare wires.

Ideally suited to low frequency vibration applications including low level vibration where high sensitivity is required.


Due to their ability to measure DC response they can also be used to measure constant gravity application.

The AMT/2HR.1000 has a range of \pm 2g and a sensitivity of 1000mV/g, we recommend using with DJB's MEMS signal conditioner the DCM-03

Features:


- Operational frequency range DC to 200Hz
- Integral cable with 7 pin connector or pigtails.
- DJB signal conditioner model DCM-03 available as an option
- Differential Capacitance operation
- Compact form and low mass
- Constant gravity measurement

AMT/2HR.1000

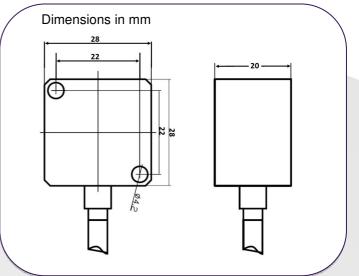

Applications:

- Auto/Aero structural body surveys
- Constant gravity measurements
- General vibration measurement
- Seismic vibration measurement
- Crash testing

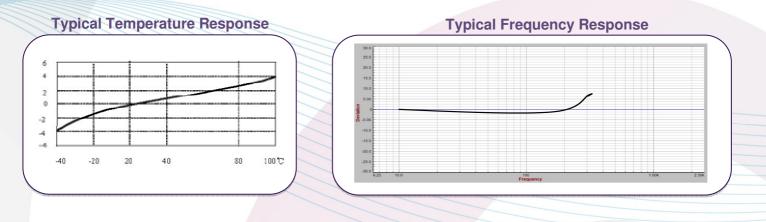

Please note: For information and reference only. Data should not be used as pass / fail criteria for calibration purposes.

DJB Instruments (UK) Ltd Finchley Avenue, Mildenhall, Suffolk IP28 7BG Tel+44 (0)1638 712 288Emailsales@djbinstruments.comWebwww.djbinstruments.com

iments.com



A UK company with UK-based manufacturing, assembly and calibration in-house.

DJB Iss.4.2021



AMT/2HR.1000 Triaxial MEMS High Resolution DC Response Accelerometer ±2g range, 1000mV/g sensitivity



	Metric	Imperial
Sensitivity (20°C)	100.97mV/(m/s²)±10%	1000mV/g±10%
Measurement Range	±19.6m/s² pk	±2g pk
Transverse sensitivitv	≤5%	
Frequency Range (±5%)	DC to 150 Hz	
Frequency Range (±10%)	DC to 200Hz	
Mounted Resonance Frequency	5,000 Hz	
Temperature Range	-40 to +120°C	-40 to +248°F
Temperature Sensitivity	0.1 mV/°C	
Shock limit (No Supply)	29,420m/s ²	±3,000g
Power Supply	+6 to +30 VDC	
Operating Current	≤5mA	
Offset Voltage	2.5±0.1VDC	
Noise(100Hz)	< 0.14mVrms	
Resolution	0.3mg (rms)	
Weight (no cable)	30grams	1.06oz
Case material	Titanium	
Case sealing	Hermetic	
Mounting	2 x Ø4.2mm holes	2 x Ø0.17inch holes
Integral Output Cable	2m	6.5ft
Cable Exit	Side	
Cable connector	7 pin connector (optional pigtails)	
Size	28 x 28 x 20mm	1.1 x 1.1 x 0.78 inches
IP rating	IP65	

Options:

- DCM-03 3 channel MEMS signal conditioning unit.
- Pigtail cable terminations

Please note: For information and reference only. Data should not be used as pass / fail criteria for calibration purposes.

DJB Instruments (UK) Ltd Finchley Avenue, Mildenhall, Suffolk IP28 7BG Tel+44 (0)1638 712 288Emailsales@djbinstruments.comWebwww.djbinstruments.com

DJB Iss.4.2021



A UK company with UK-based manufacturing, assembly and calibration in-house.