

IS/07

Isolated Mounting Stud – 13mmA/F 5-40UNC thread / 10/32UNF thread



DJB Part Number: IS/07

Description: The IS/07 is an isolating mounting stud which belongs to the IS range of studs. All the studs in the IS range offer complete electrical isolation between the accelerometer and the mounting surface of the test item.

The IS/07 is often used in vibration shaker testing where ground loops are a common issue.

Manufactured by DJB in the UK.

Recommended torque setting: 1Nm


Temperature Range: -70°C to +200°C

Material List:

Body: Stainless Steel 303S31

High temperature epoxy resin

Insulator: PTFE

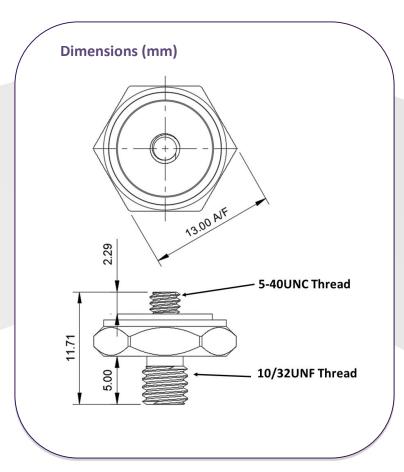

Please note: The facts and figures contained herein are carefully compiled to the best of our knowledge intended for general information purposes only, specifications are subject to change without prior notification.

A UK company with UK-based manufacturing, assembly and calibration in-house.